Lab 8: Silicon Synaptic Circuits

Team member 1: Jan Hohenheim

Team member 2: Maxim Gärtner

Date:


This week, we will see how synaptic circuits generate currents when stimulated by voltage pulses. Specifically we will measure the response of the synapse to a single pulse, and to a sequence of spikes.

The objectives of this lab are to:

- Analyze log-domain synapse circuits.
- Measure the response properties of the diff-pair integrator (DPI) synapse and of the dual diff-pair integrator (DDI) synapse.

1. Prelab

A Differential Pair Integrator circuit

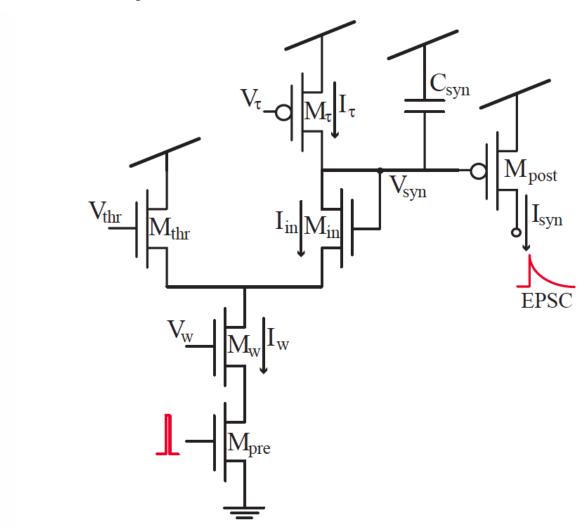

(1) Write the equations characterizing $I_w, I_{thr}, I_{in}, I_{\tau}, I_{syn}, I_C$ assuming all corresponding FETs are in saturation and operate in weak-inversion.

:


$$\begin{split} \bullet & \ I_{w} = I_{0}e^{\frac{\kappa V_{w}}{U_{T}}} \\ \bullet & \ I_{thr} = I_{0}e^{\frac{\kappa V_{syn} - V_{syn}}{U_{T}}} \\ \bullet & \ I_{in} = I_{0}e^{\frac{\kappa V_{syn} - V_{syn}}{U_{T}}} = I_{w}\frac{e^{\frac{\kappa V_{syn}}{U_{T}}}}{e^{\frac{\kappa V_{syn}}{U_{T}}} + e^{\frac{\kappa V_{thr}}{U_{T}}}} \\ \bullet & \ I_{\tau} = I_{0}e^{\frac{\kappa (V_{dd} - V_{\tau})}{U_{T}}} \\ \bullet & \ I_{syn} = I_{0}e^{\frac{\kappa (V_{dd} - V_{syn})}{U_{T}}} \\ \bullet & \ I_{C} = C\frac{d}{dt}(V_{dd} - V_{syn}) \end{split}$$

(2) What is the time constant of the circuit?

$$au = rac{CU_T}{\kappa I_ au}$$

(3) Derive the circuit's response to a step input assuming $I_w(t<0)=0, I_w(t>0)\gg I_ au.$


```
In [6]:
         import numpy as np
         import matplotlib.pyplot as plt
         def get next I syn(I syn, tau, I tau, I thr, I w, dt):
             return I syn + (I w*I thr - I syn*I tau) / (tau * I tau) *dt
         tau = 0.3
         I tau = 5e-9
         I w = 5e-7
         I thr = 5e-6
         x = np.linspace(0, 2, 100)
         dt = x[1] - x[0]
         y = [0]
         for in range (len (x[1:])):
             I syn = get next I syn(y[-1], tau, I tau, I thr, I w, dt)
             y.append(I syn)
         plt.plot(x, y, label="$I {syn}$")
         plt.title(r"$I \{syn\}$ with $I \{w\} (t < 0) = 0, I \{w\} (t > 0) \gg I \{\tau\}$")
         plt.ylabel("$I {syn}$ [A]")
         plt.xlabel("t [s]")
         plt.legend()
         plt.show()
```

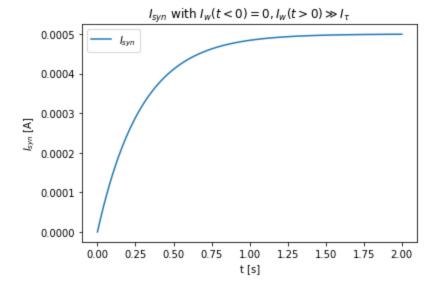

(4) Derive the circuit's response to a step input assuming $I_w(t<0)\gg I_ au,I_w(t>0)=0.$

$$\begin{array}{l} \bullet \ \ I_w \ll I_\tau \Rightarrow \tau \frac{d}{dt} I_{syn} + I_{syn} = 0 \Rightarrow \frac{d}{dt} I_{syn} = -\frac{I_{syn}}{\tau} \\ \bullet \ \ I_w \gg I_\tau \Rightarrow \tau \frac{d}{dt} I_{syn} + I_{syn} = \frac{I_w I_{thr}}{I_\tau} \Rightarrow \frac{d}{dt} I_{syn} = \frac{I_w I_{thr} - I_{syn} I_\tau}{\tau I_\tau} \end{array}$$

```
In [3]:
         import numpy as np
         import matplotlib.pyplot as plt
         def get next I syn(I syn, tau, I tau, I thr, I w, dt):
             return I syn + (I w*I thr - I syn*I tau)/(tau * I tau)*dt
         tau = 0.3
         I tau = 5e-7
         I w = 5e-9
         I thr = 5e-6
         x = np.linspace(0, 2, 100)
         dt = x[1] - x[0]
         y = [5e-4]
         for _{_{}} in range(len(x[1:])):
             I_syn = get_next_I_syn(y[-1], tau, I_tau, I thr, I w, dt)
             y.append(I syn)
         plt.plot(x, y, label="$I {syn}$")
         plt.title(r"$I \{syn\}$ with $I \{w\} (t < 0) \gg I \{\tau\}, I \{w\} (t > 0) = 0$")
         plt.ylabel("$I {syn}$ [A]")
         plt.xlabel("t [s]")
         plt.legend()
         plt.show()
```

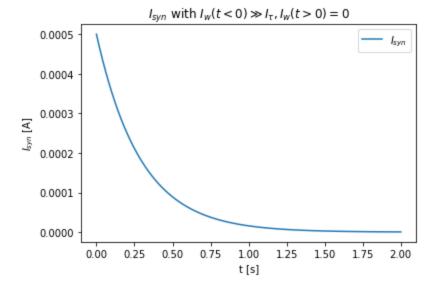

(5) Suppose we stimulate the circuit with a regular spike train of frequency f (high enough). What happens to I_{syn} in steady-state (average value)?

$$au rac{d}{dt} I_{syn} + I_{syn} = rac{I_w I_{thr}}{I_ au}$$
 Steady-state $\Rightarrow rac{d}{dt} I_{syn} = 0 rac{A}{s}$ $\Rightarrow I_{syn} = rac{I_w I_{thr}}{I_ au}$

(6) In what conditions (tau and thr) is the step response dependent only on I_w ?

Per the formula above, when $I_{thr}=I_{ au}$

2 Setup

(1, 8, 4)

In [2]:

Out[4]:

In [5]:

2.1 Connect the device

import the necessary libraries

```
import pyplane
import time
import numpy as np
import matplotlib.pyplot as plt
from scipy import interpolate

In [3]:
# create a Plane object and open the communication
if 'p' not in locals():
    p = pyplane.Plane()
    try:
        p.open('/dev/ttyACMO')
    except RuntimeError as e:
        del p
        print(e)
In [4]:
p.get_firmware_version()
```

```
# Send a reset signal to the board, check if the LED blinks
p.reset(pyplane.ResetType.Soft)
time.sleep(0.5)
# NOTE: You must send this request events every time you do a reset operation, otherwise
# Because the class chip need to do handshake to get the communication correct.
p.request_events(1)

In [6]: # Try to read something, make sure the chip responses
p.read_current(pyplane.AdcChannel.GOO_N)

Out[6]: 1.530761721824092e-07

In [7]: # If any of the above steps fail, delete the object, close and halt, stop the server and
# please also say your board number: ttyACMx
# del p
```

2.2 Chip configuration

• To measure DPI synapse:

2.3 C2F

• To set up the C2F circuit:

```
In [9]:
         # setup C2F
         p.send coach events([pyplane.Coach.generate biasgen event(\)
             pyplane.Coach.BiasAddress.C2F HYS P, \
             pyplane.Coach.BiasType.P, \
             pyplane.Coach.BiasGenMasterCurrent.I60pA, 100)])
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.C2F BIAS P, \
             pyplane.Coach.BiasType.P, \
             pyplane.Coach.BiasGenMasterCurrent.I240nA, 255)])
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.C2F PWLK P, \
             pyplane.Coach.BiasType.P, \
             pyplane.Coach.BiasGenMasterCurrent.I240nA, 255)])
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.C2F REF L, \
             pyplane.Coach.BiasType.N, \
             pyplane.Coach.BiasGenMasterCurrent.I240nA, 255)])
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.C2F REF H, \
             pyplane.Coach.BiasType.P, \
             pyplane.Coach.BiasGenMasterCurrent.I240nA, 255)])
```

```
# setup output rail-to-rail buffer
p.send_coach_events([pyplane.Coach.generate_biasgen_event(\
    pyplane.Coach.BiasAddress.RR_BIAS_P, \
    pyplane.Coach.BiasType.P, \
    pyplane.Coach.BiasGenMasterCurrent.I240nA, 255)])
```

2.4 BiasGen

In a simplified form, the output of a branch of the BiasGen will be the gate voltage V_b for the bias current I_b , and if the current mirror has a ratio of w and the bias transistor operates in subthreshold-saturation:

$$I_b = w \frac{BG_{fine}}{256} I_{BG_{master}} \tag{1}$$

Where $I_{BG_{master}}$ is the BiasGenMasterCurrent $\in \{60~\mathrm{pA}, 460~\mathrm{pA}, 3.8~\mathrm{nA}, 30~\mathrm{nA}, 240~\mathrm{nA}\}$, BG_{fine} is the integer fine value $\in [0, 256)$

To set a bias, use the function similar to the following:

```
p.send_coach_event(pyplane.Coach.generate_biasgen_event(\
    pyplane.Coach.BiasAddress.BIAS_NAME, \
    pyplane.Coach.BiasType.BIAS_TYPE, \
    pyplane.Coach.BiasGenMasterCurrent.MASTER_CURRENT, FINE_VALUE))
```


You may have noticed that there are some biases that are not used to directly generate a current, but rather what matters is the voltage, e.g. V_{gain} , V_{ex} and V_{inh} in our HWTA circuit. Even though they may have a BIAS_NAME ending with _N or _P it only indicates that they are connected to the gate of an N- or a P-FET, but the BIAS_TYPE parameter can be both _N or _P . For example, setting a _N bias to BIAS_TYPE = P will only make this voltage very close to GND, which is sometimes the designed use case.

2.5 Pulse extender circuit

In case you didn't look into the last problem in prelab, the pulse extender circuit basically defines the pulse width, which is inversely proportional to the parameter PEX_VTAU_N .

3 DPI synapse

The **DPI synapse** receives a voltage pulse train, V_{pulse} , as input and outputs a corresponding synaptic current, I_{syn} . Additionally, the synaptic voltage, V_{syn} , is provided. Bias parameters V_{weight} & V_{tau} affect the amplitude and decay of the response, while V_{thr} acts as an additional weight bias. C_{syn} sizing was chosen for a capacitance of 2pF.

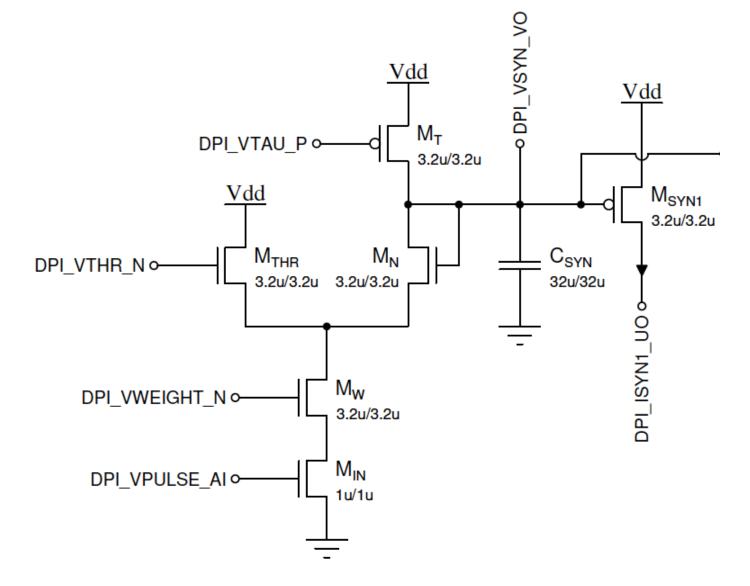

Pin map

 V_{syn} = adc[14]

 I_{syn} = c2f[9]

The task of this exercise it to tune the parameters and observe the behavior of the DPI synapse.

3.1 Basic impulse response

Set parameters

```
p.send_coach_events([pyplane.Coach.generate_biasgen_event(\
    pyplane.Coach.BiasAddress.PEX_VTAU_N, \
    pyplane.Coach.BiasType.N, \
    pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
```

• Data acquisition

```
In [10]:
    N_pulses = 2 # for each trial, send 2 input pulses
    N_samples_per_pulse = 10 # for each input pulse, sample 10 points
    N_samples = N_pulses*N_samples_per_pulse
    dT = 0.02 # delta t between the samples, DO NOT CHANGE
    t = np.arange(N_samples)*dT
    vsyn = np.zeros(N_samples)
    isyn = np.zeros(N_samples)
    for k in range(N_pulses):
        p.send_coach_events([pyplane.Coach.generate_pulse_event()])
    for i in range(N_samples_per_pulse):
        vsyn[k*N_samples_per_pulse+i] += p.read_voltage(pyplane.AdcChannel.AOUT14)
        inter=p.read_c2f_output(dT)
        isyn[k*N_samples_per_pulse+i] += inter[9]
```

Plot the data

```
In [1]:
         import matplotlib.pyplot as plt
         import numpy as np
         plt.rcParams.update({'font.size': 15})
         t,vsyn,isyn = np.loadtxt('data/data ex 3 1.csv',delimiter=',')
         plt.plot(t, vsyn, '-')
         plt.xlabel('t [s]')
         plt.ylabel('$V {syn}$ [V]')
         plt.legend(['$V {syn}$'],bbox to anchor=(1.05, 1),loc='upper left')
         plt.title('Fig. 1: Measured values of $V {syn}$ as a function of time')
         plt.grid()
         plt.show()
         plt.plot(t,isyn,'-')
         plt.xlabel('t [s]')
         plt.ylabel('C2F [Hz]')
         plt.legend(['C2F$(I {syn})$'],bbox to anchor=(1.05, 1),loc='upper left')
         plt.title('Fig. 2: Measured C2F values of $I {syn}$ as a function of time')
         plt.grid()
         plt.show()
```

Fig. 1: Measured values of V_{syn} as a function of time


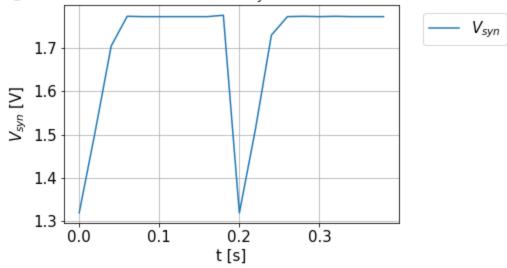


Fig. 2: Measured C2F values of I_{syn} as a function of time

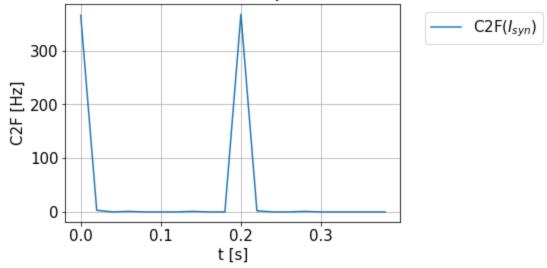

Save the data

```
In [11]: np.savetxt('data/data_ex_3_1.csv',[t,vsyn,isyn] , delimiter=',')
```

3.2 Different I_{weight}

Repeat 3.1 with a smaller and a larger I_{weight} , compare the three curves in the same plot.

Set smaller bias

```
pyplane.Coach.BiasAddress.DPI_VWEIGHT_N, \
    pyplane.Coach.BiasType.N, \
    pyplane.Coach.BiasGenMasterCurrent.I30nA, 50)]) #change weight

p.send_coach_events([pyplane.Coach.generate_biasgen_event(\
    pyplane.Coach.BiasAddress.PEX_VTAU_N, \
    pyplane.Coach.BiasType.N, \
    pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
```

• Data acquisition

```
In [12]:
    N_pulses = 2 # for each trial, send 2 input pulses
    N_samples_per_pulse = 10 # for each input pulse, sample 10 points
    N_samples = N_pulses*N_samples_per_pulse
    dT = 0.02 # delta t between the samples, DO NOT CHANGE
    t = np.arange(N_samples)*dT
    vsyn = np.zeros(N_samples)
    isyn = np.zeros(N_samples)
    for k in range(N_pulses):
        p.send_coach_events([pyplane.Coach.generate_pulse_event()])
    for i in range(N_samples_per_pulse):
        vsyn[k*N_samples_per_pulse+i] += p.read_voltage(pyplane.AdcChannel.AOUT14)
        inter=p.read_c2f_output(dT)
        isyn[k*N_samples_per_pulse+i] += inter[9]
```

Save data

```
In [13]: np.savetxt('data/data_ex_3_2_smaller.csv',[t,vsyn,isyn] , delimiter=',')
```

Set larger bias

```
In [31]:
         #Insert a bigger I weight
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.DPI VTAU P, \
             pyplane.Coach.BiasType.P, \
             pyplane.Coach.BiasGenMasterCurrent.I60pA, 25)])
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.DPI VTHR N, \
             pyplane.Coach.BiasType.P, \
             pyplane.Coach.BiasGenMasterCurrent.I60pA, 30)])
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasType.N, \
             pyplane.Coach.BiasGenMasterCurrent.I30nA, 150)]) #change weight
         p.send coach events([pyplane.Coach.generate biasgen event(\
             pyplane.Coach.BiasAddress.PEX VTAU N, \
             pyplane.Coach.BiasType.N, \
             pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
```

Data acquisition

```
In [32]:
    N_pulses = 2 # for each trial, send 2 input pulses
    N_samples_per_pulse = 10 # for each input pulse, sample 10 points
    N_samples = N_pulses*N_samples_per_pulse
```

```
dT = 0.02 # delta t between the samples, DO NOT CHANGE
t = np.arange(N_samples)*dT
vsyn = np.zeros(N_samples)
isyn = np.zeros(N_samples)
for k in range(N_pulses):
    p.send_coach_events([pyplane.Coach.generate_pulse_event()])
    for i in range(N_samples_per_pulse):
        vsyn[k*N_samples_per_pulse+i] += p.read_voltage(pyplane.AdcChannel.AOUT14)
        inter=p.read_c2f_output(dT)
        isyn[k*N_samples_per_pulse+i] += inter[9]
```

Save data

```
In [33]: np.savetxt('data/data_ex_3_2_bigger.csv',[t,vsyn,isyn] , delimiter=',')
```

Plot

```
In [34]:
                               import matplotlib.pyplot as plt
                               import numpy as np
                               plt.rcParams.update({'font.size': 15})
                               t, vsyn smaller, isyn smaller = np.loadtxt('data/data ex 3 2 smaller.csv', delimiter=',')
                               ,vsyn normal,isyn normal = np.loadtxt('data/data ex 3 1.csv',delimiter=',')
                               _,vsyn_bigger,isyn_bigger = np.loadtxt('data/data ex 3 2 bigger.csv',delimiter=',')
                               plt.plot(t,vsyn smaller,t,vsyn normal,t,vsyn bigger)
                               plt.xlabel('t [s]')
                               plt.ylabel('$V {syn}$ [V]')
                               plt.legend(['$V {syn}$ - Smaller $I w$','$V {syn}$ - Normal $I w$','$V {syn}$ - Larger $I w$','$V {s
                               plt.title('Fig. 3: Measured values of $V {syn}$ as function of time for varying $I {w}$')
                               plt.grid()
                               plt.show()
                               plt.plot(t[1:],isyn smaller[1:],t,isyn normal,t,isyn bigger)
                               plt.xlabel('t [s]')
                               plt.ylabel('C2F [Hz]')
                               plt.legend(['C2F$(I {syn})$ - Smaller $I w$','C2F$(I {syn})$ - Normal $I w$','C2F$(I {syn})
                               plt.title('Fig. 4: Measured values of $I {syn}$ as function of time for varying $I {w}$')
                               plt.grid()
                               plt.show()
```

Fig. 3: Measured values of V_{syn} as function of time for varying I_w


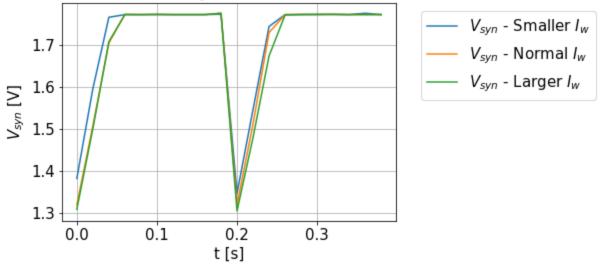


Fig. 4: Measured values of I_{syn} as function of time for varying I_w

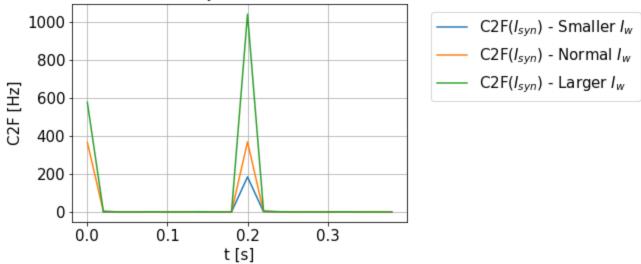

3.3 Different I_{tau}

Repeat 3.1 with a smaller and a larger I_{tau} , compare the three curves in the same plot.

```
In [42]:
          ## REMINDER , RESET ALL PARAMETERS AS 3.1
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTAU P, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
          p.send coach events([pyplane.Coach.generate biasgen event(\)
              pyplane.Coach.BiasAddress.DPI VTHR N, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 30)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VWEIGHT N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I30nA, 100)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.PEX VTAU N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
```

```
N pulses = 2 # for each trial, send 2 input pulses
In [43]:
          N samples per pulse = 10 # for each input pulse, sample 10 points
          N samples = N pulses*N samples per pulse
          {
m dT} = 0.02 # delta t between the samples, DO NOT CHANGE
          t = np.arange(N samples)*dT
          vsyn = np.zeros(N samples)
          isyn = np.zeros(N samples)
          for k in range(N pulses):
              p.send coach events([pyplane.Coach.generate pulse event()])
              for i in range(N samples per pulse):
                  vsyn[k*N \text{ samples per pulse+i}] += p.read voltage(pyplane.AdcChannel.AOUT14)
                  inter=p.read c2f output(dT)
                  isyn[k*N samples per pulse+i] += inter[9]
In [44]:
          np.savetxt('data/data ex 3 3 smaller.csv',[t,vsyn,isyn] , delimiter=',')
In [45]:
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTAU P, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 40)])
                                                                 #change tau
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTHR N, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 30)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VWEIGHT N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I30nA, 100)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.PEX VTAU N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
In [46]:
          N pulses = 2 # for each trial, send 2 input pulses
          N samples per pulse = 10 # for each input pulse, sample 10 points
          N samples = N pulses*N samples per pulse
          dT = 0.02 # delta t between the samples, DO NOT CHANGE
          t = np.arange(N samples)*dT
          vsyn = np.zeros(N samples)
          isyn = np.zeros(N samples)
          for k in range(N pulses):
              p.send coach events([pyplane.Coach.generate pulse event()])
              for i in range(N samples per pulse):
                  vsyn[k*N samples per pulse+i] += p.read voltage(pyplane.AdcChannel.AOUT14)
                  inter=p.read c2f output(dT)
                  isyn[k*N samples per pulse+i] += inter[9]
In [47]:
          np.savetxt('data/data ex 3 3 bigger.csv',[t,vsyn,isyn] , delimiter=',')
In [48]:
          import matplotlib.pyplot as plt
          import numpy as np
          plt.rcParams.update({'font.size': 15})
          t, vsyn smaller, isyn smaller = np.loadtxt('data/data ex 3 3 smaller.csv', delimiter=',')
           ,vsyn normal,isyn normal = np.loadtxt('data/data ex 3 1.csv',delimiter=',')
```

Fig. 5: Measured values of V_{syn} as function of time for varying I_{τ}


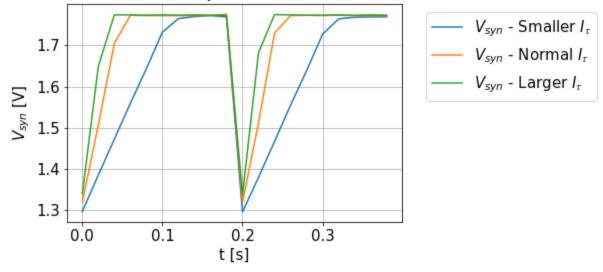


Fig. 6: Measured values of I_{syn} as function of time for varying I_{τ}

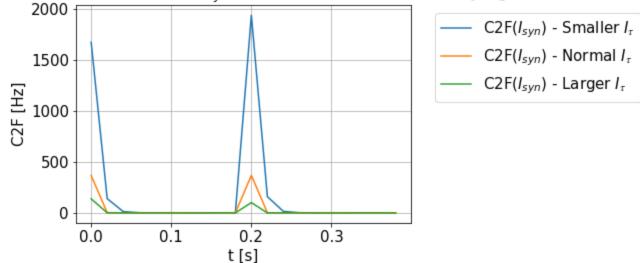

3.4 Different I_{thr}

Repeat 3.1 with a smaller and a larger I_{thr} , compare the three curves in the same plot.

```
In [11]: | p.send_coach_events([pyplane.Coach.generate_biasgen_event(\
              pyplane.Coach.BiasAddress.DPI VTAU P, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 25)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTHR N, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)]) #change threshold
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VWEIGHT N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I30nA, 100)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.PEX VTAU N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
In [12]:
          N pulses = 2 # for each trial, send 2 input pulses
          N samples per pulse = 10 # for each input pulse, sample 10 points
          N samples = N pulses*N samples per pulse
          dT = 0.02 # delta t between the samples, DO NOT CHANGE
          t = np.arange(N samples)*dT
          vsyn = np.zeros(N samples)
          isyn = np.zeros(N samples)
          for k in range(N pulses):
              p.send coach events([pyplane.Coach.generate pulse event()])
              for i in range(N_samples_per_pulse):
                  vsyn[k*N samples per pulse+i] += p.read voltage(pyplane.AdcChannel.AOUT14)
                  inter=p.read c2f output(dT)
                  isyn[k*N samples per pulse+i] += inter[9]
In [13]:
          np.savetxt('data/data ex 3 4 smaller.csv',[t,vsyn,isyn] , delimiter=',')
In [14]:
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTAU P, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 25)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTHR N, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 80)]) #change threshold
          p.send coach events([pyplane.Coach.generate biasgen event(\)
              pyplane.Coach.BiasAddress.DPI VWEIGHT N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I30nA, 100)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.PEX VTAU N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 10)])
In [15]:
         N pulses = 2 # for each trial, send 2 input pulses
          N samples per pulse = 10 # for each input pulse, sample 10 points
```

N samples = N pulses*N samples per pulse

dT = 0.02 # delta t between the samples, DO NOT CHANGE

```
t = np.arange(N_samples)*dT
vsyn = np.zeros(N_samples)
isyn = np.zeros(N_samples)
for k in range(N_pulses):
    p.send_coach_events([pyplane.Coach.generate_pulse_event()])
    for i in range(N_samples_per_pulse):
        vsyn[k*N_samples_per_pulse+i] += p.read_voltage(pyplane.AdcChannel.AOUT14)
        inter=p.read_c2f_output(dT)
        isyn[k*N_samples_per_pulse+i] += inter[9]
```

```
In [16]:
          np.savetxt('data/data ex 3 4 bigger.csv',[t,vsyn,isyn] , delimiter=',')
In [17]:
          import matplotlib.pyplot as plt
          import numpy as np
          plt.rcParams.update({'font.size': 15})
          t, vsyn smaller, isyn smaller = np.loadtxt('data/data ex 3 4 smaller.csv', delimiter=',')
          ,vsyn normal,isyn normal = np.loadtxt('data/data ex 3 1.csv',delimiter=',')
          ,vsyn bigger,isyn bigger = np.loadtxt('data/data ex 3 4 bigger.csv',delimiter=',')
          plt.plot(t,vsyn smaller,t,vsyn normal,t,vsyn bigger)
          plt.xlabel('t [s]')
          plt.ylabel('$V {syn}$ [V]')
          plt.legend(['$V {syn}$ - Smaller $I {thr}$','$V {syn}$ - Normal $I {thr}$','$V {syn}$ - Le
          plt.title('Fig. 7: Measured values of $V {syn}$ as function of time for varying $I {thr}$
          plt.grid()
          plt.show()
          plt.plot(t[1:],isyn smaller[1:],t,isyn normal,t,isyn bigger)
          plt.xlabel('t [s]')
          plt.ylabel('C2F [Hz]')
          plt.legend(['C2F$(I {syn})$ - Smaller $I {thr}$','C2F$(I {syn})$ - Normal $I {thr}$','C2F$
          plt.title('Fig. 8: Measured values of $I {syn}$ as function of time for varying $I {thr}$
          plt.grid()
```

Fig. 7: Measured values of V_{syn} as function of time for varying I_{thr}

plt.show()


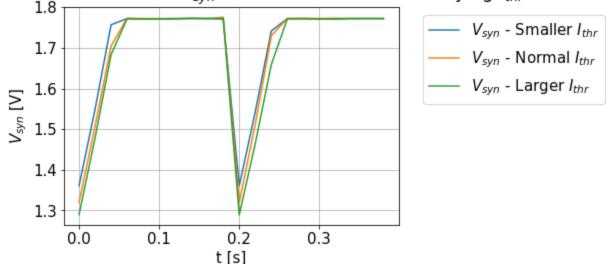


Fig. 8: Measured values of I_{syn} as function of time for varying I_{thr}

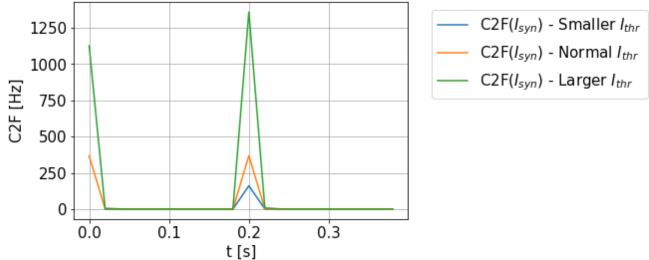

3.5 Different pulse width

Repeat 3.1 with a smaller and a larger pulse width, compare the three curves in the same plot.

```
In [26]:
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTAU P, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 25)])
          p.send coach events([pyplane.Coach.generate biasgen event(\)
              pyplane.Coach.BiasAddress.DPI VTHR N, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 30)])
          p.send coach events([pyplane.Coach.generate biasgen event(\)
              pyplane.Coach.BiasAddress.DPI VWEIGHT N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I30nA, 100)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.PEX VTAU N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 6)]) # Change pulse width
```

```
In [27]:
    N_pulses = 2 # for each trial, send 2 input pulses
    N_samples_per_pulse = 10 # for each input pulse, sample 10 points
    N_samples = N_pulses*N_samples_per_pulse
    dT = 0.02 # delta t between the samples, DO NOT CHANGE
    t = np.arange(N_samples)*dT
    vsyn = np.zeros(N_samples)
    isyn = np.zeros(N_samples)
    for k in range(N_pulses):
        p.send_coach_events([pyplane.Coach.generate_pulse_event()])
    for i in range(N_samples_per_pulse):
        vsyn[k*N_samples_per_pulse+i] += p.read_voltage(pyplane.AdcChannel.AOUT14)
        inter=p.read_c2f_output(dT)
        isyn[k*N_samples_per_pulse+i] += inter[9]
```

```
In [28]: np.savetxt('data/data_ex_3_5_smaller.csv',[t,vsyn,isyn] , delimiter=',')
```

```
In [29]:
```

```
p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VTAU P, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 25)])
          p.send coach events([pyplane.Coach.generate biasgen event(\)
              pyplane.Coach.BiasAddress.DPI VTHR N, \
              pyplane.Coach.BiasType.P, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 30)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.DPI VWEIGHT N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I30nA, 100)])
          p.send coach events([pyplane.Coach.generate biasgen event(\
              pyplane.Coach.BiasAddress.PEX VTAU N, \
              pyplane.Coach.BiasType.N, \
              pyplane.Coach.BiasGenMasterCurrent.I60pA, 14)]) # Change pulse width
In [30]:
          N pulses = 2 # for each trial, send 2 input pulses
          N samples per pulse = 10 # for each input pulse, sample 10 points
          N samples = N pulses*N samples per pulse
          dT = 0.02 # delta t between the samples, DO NOT CHANGE
          t = np.arange(N samples)*dT
          vsyn = np.zeros(N samples)
          isyn = np.zeros(N samples)
          for k in range(N pulses):
              p.send coach events([pyplane.Coach.generate pulse event()])
              for i in range(N samples per pulse):
                  vsyn[k*N samples per pulse+i] += p.read voltage(pyplane.AdcChannel.AOUT14)
                  inter=p.read c2f output(dT)
                  isyn[k*N samples_per_pulse+i] += inter[9]
In [31]:
          np.savetxt('data/data ex 3 5 bigger.csv',[t,vsyn,isyn] , delimiter=',')
In [36]:
          import matplotlib.pyplot as plt
          import numpy as np
          plt.rcParams.update({'font.size': 15})
          t, vsyn smaller, isyn smaller = np.loadtxt('data/data ex 3 5 smaller.csv', delimiter=',')
          _,vsyn_normal,isyn_normal = np.loadtxt('data/data_ex_3_1.csv',delimiter=',')
          ,vsyn bigger,isyn bigger = np.loadtxt('data/data ex 3 5 bigger.csv',delimiter=',')
          plt.plot(t,vsyn smaller,t,vsyn normal,t,vsyn bigger)
          plt.xlabel('t [s]')
          plt.ylabel('$V {syn}$ [V]')
          plt.legend(['$V {syn}$ - Smaller $I {\\rm{pulse\ width}}$','$V {syn}$ - Normal $I {\\rm{pu}
          plt.title('Fig. 9: Measured values of V {syn} as function of time for varying I {\rm yrm}
          plt.grid()
          plt.show()
          plt.plot(t[1:],isyn smaller[1:],t,isyn normal,t,isyn bigger)
          plt.xlabel('t [s]')
          plt.ylabel('C2F [Hz]')
          plt.legend(['C2F$(I {syn})$ - Smaller $I {\\rm{pulse\ width}}$','C2F$(I {syn})$ - Normal $
          plt.title('Fig. 10: Measured values of $I {syn}$ as function of time for varying $I {\\rm
```

plt.grid()
plt.show()

Fig. 9: Measured values of V_{syn} as function of time for varying $I_{pulse\ width}$

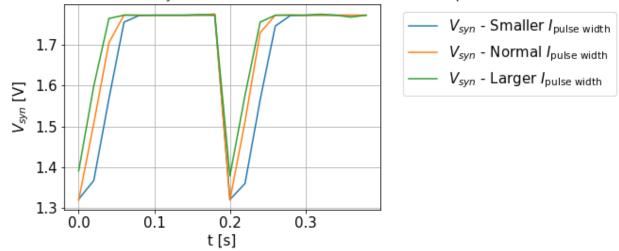


Fig. 10: Measured values of I_{syn} as function of time for varying $I_{pulse\ width}$

